COOKTOP PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

30" DROP−IN
ELECTRIC
STANDARD CLEAN
OVEN

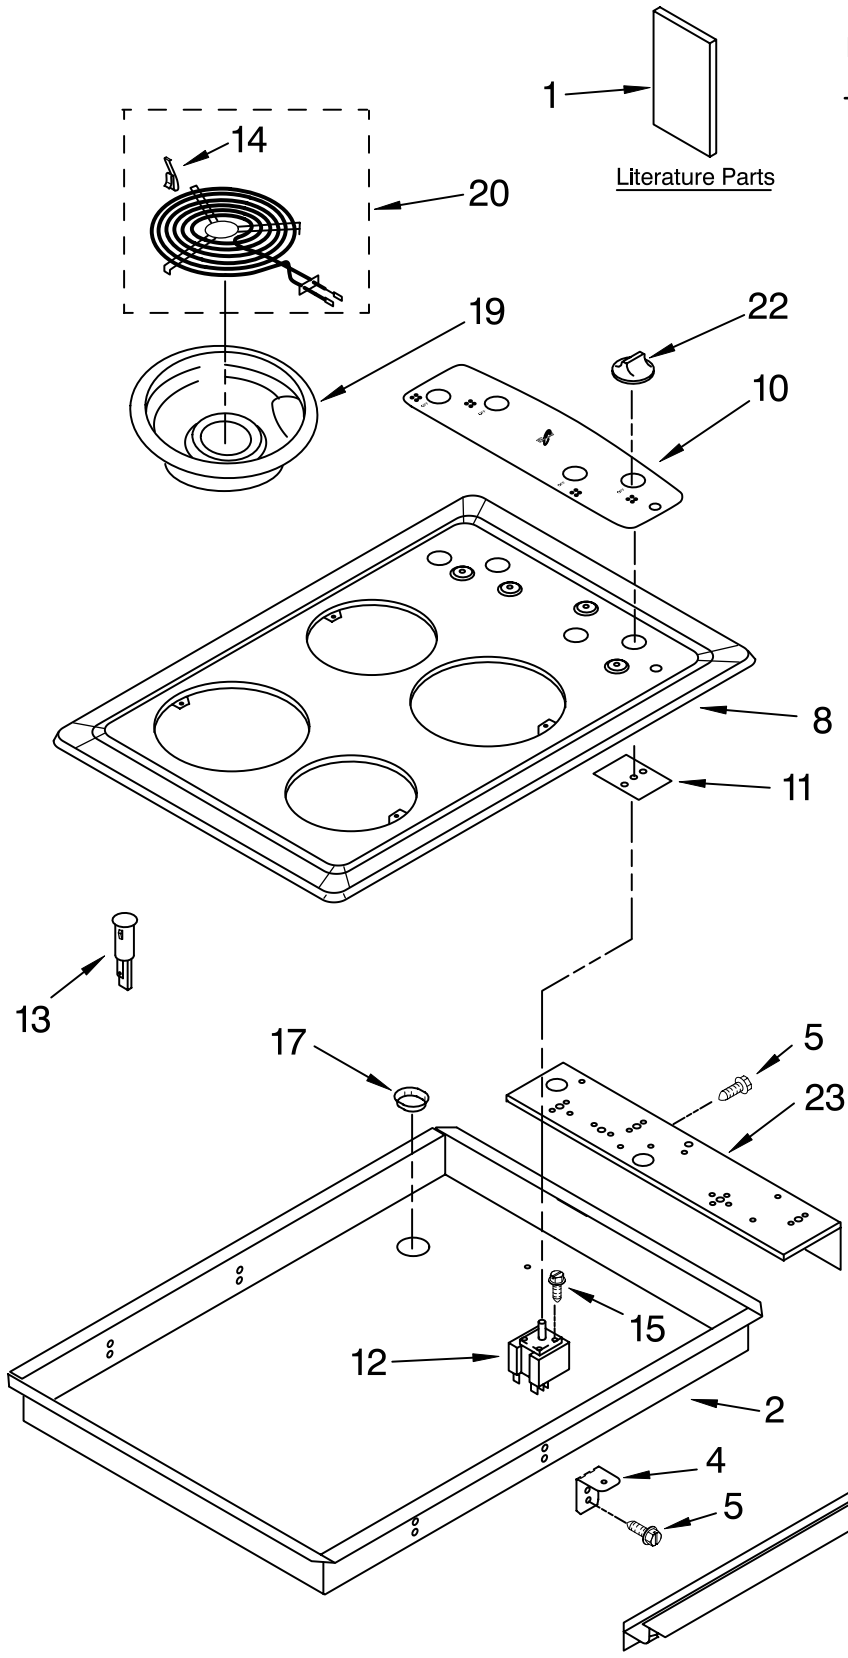

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8300649	Installation Instructions
	9763523	Use & Care Guide
	8302071	Tech Sheet
	3191638	Safe Cooking Tips
	9759133	Safe Cooking Tips
2	3192459	Burner Box
4	3192575	Bracket, Mounting
5	3196537	Screw, 8−18 x 3/8
6	3400843	Screw
7	3192102	Trim, Extension
8		Cooktop
	3191168	White
	8284709	Biscuit
10	3191228	Panel, Control
11	3183956	Seal, Switch (4)
12		Switch, Infinite
	3191471	Use W/ 6" Surface (Blue Shaft)
	3191472	Use W/ 8" Surface (Silver Shaft)
13	4456181	Light, Indicator
14	3195917	Clip, Element
15	3400855	Screw, 8−32 x 1/4
17	4448444	Grommet
19		Drip Bowl
	3195208	6" (2)
	3195209	8" (2)
20		Element, Coil
	8053265	6" LF−RR
	8053267	8" RF−LR
22	3196231	Knob, Control (4)
23	3192330	Bracket, Switch Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

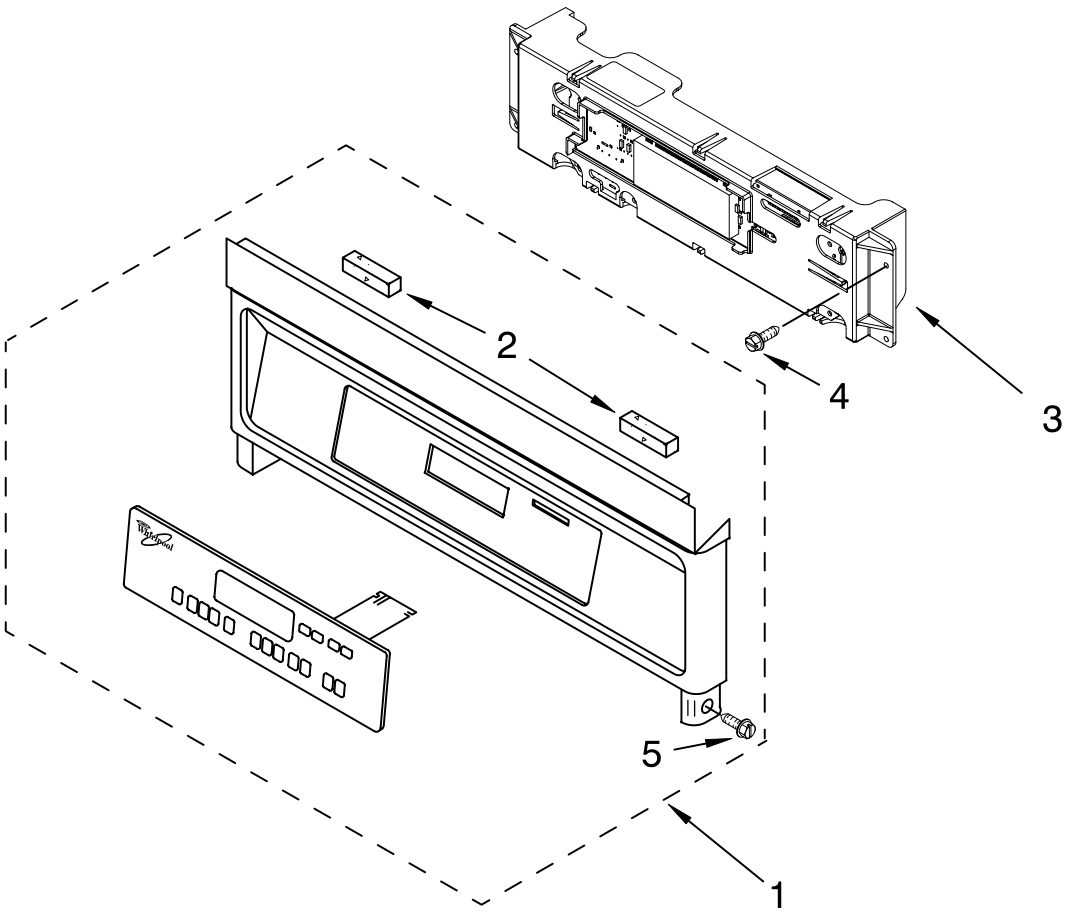

Illus. No.	Part No.	DESCRIPTION
1	4456313	Control Panel Assy. W/Membrane Switch
2	4451034	Gasket, Control Panel
3	8302994	Assy, Control
4	4449745	Screw
5	3400832	Screw

OVEN PARTS

For Models:RS610PXGW11,RS610PXGV11

(White) (Black on Biscuit)

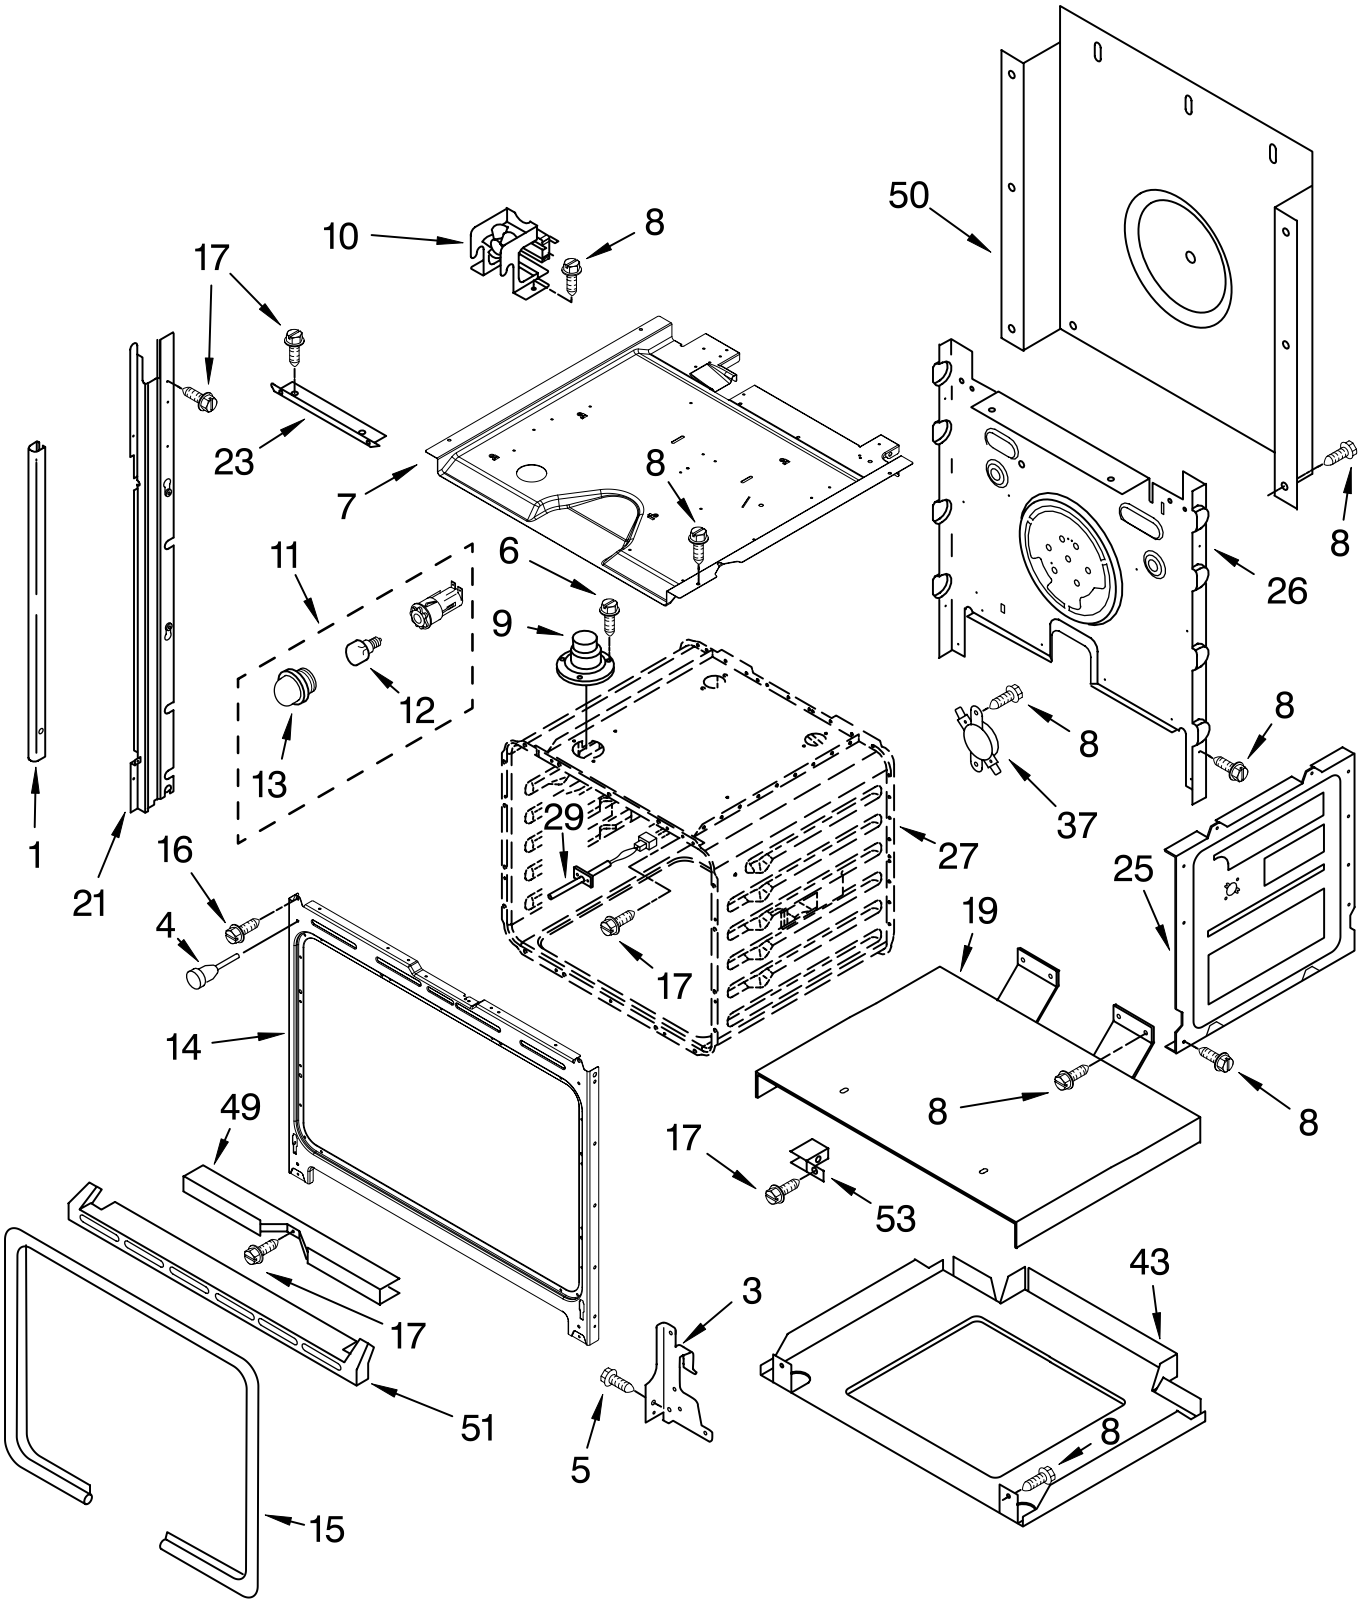

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Side
	4450844	RH Black
	4450847	LH Black
3		Hinge Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
5	4449743	Screw
6	3196176	Screw
7	8303099	Top, Chassis
8	4449809	Screw
9	4452159	Tube, Vent
10	4451664	Fan & Bracket Assy
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
13	4452165	Lens, Light
14	9759060	Frame, Front
15	4450493	Gasket, Door
16	4449040	Screw
17	4449154	Screw
19	4451478	Support, Insulation
21		Rail, Side
	4450579	Right Side
	4450580	Left Side
23	4450051	Deflector
25	4455641	Side, Chassis (R.H. & L.H.)
26	4452234	Back, Chassis
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
37	4451354	Fuse − Thermal
43	9759713	Base, Chassis
49	4448933	Retainer
50	4451747	Cover, Back
51	4448477	Trim, Bottom
53	4449845	Support, Bracket

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

OVEN DOOR PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

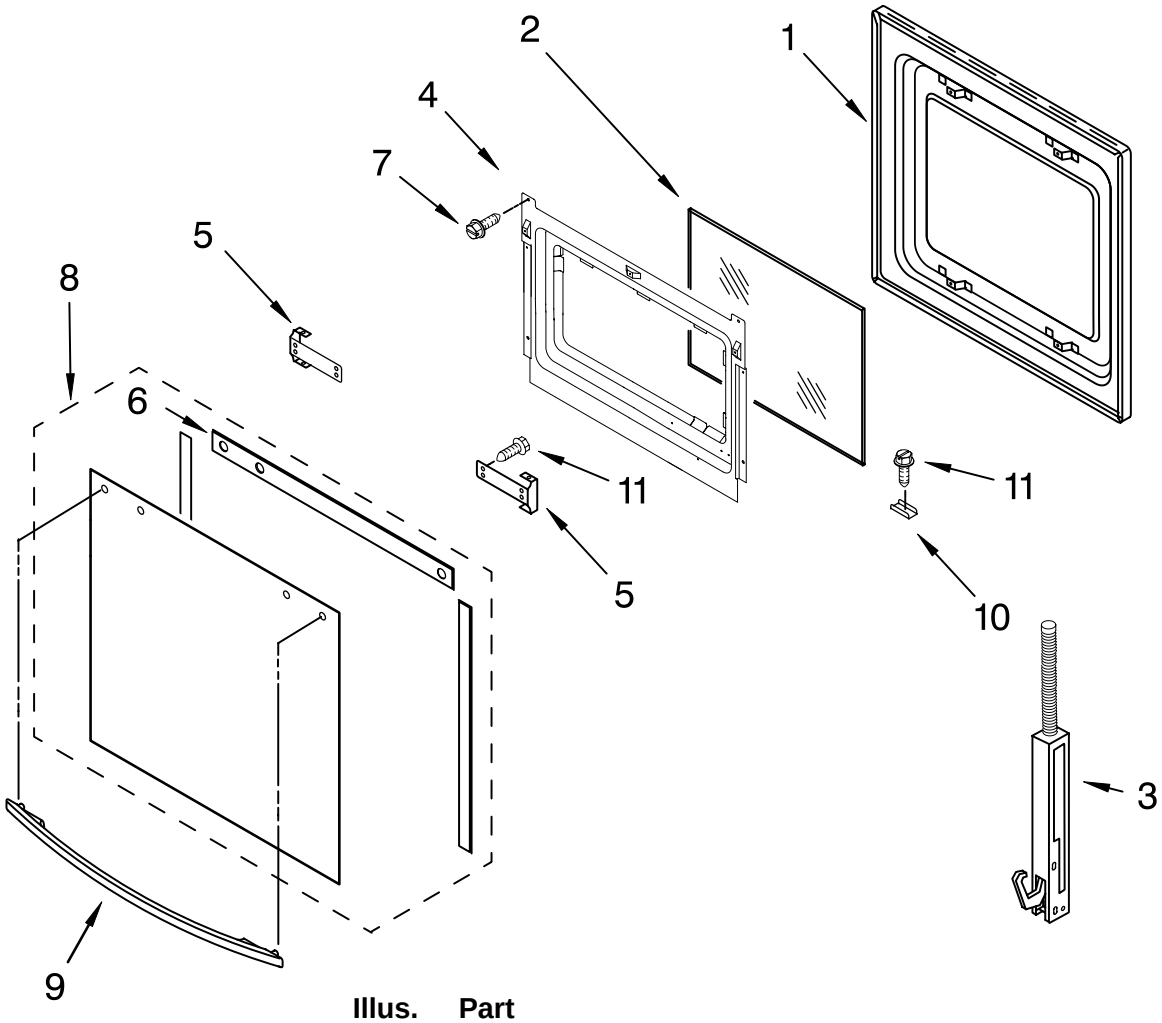

Illus. No.	Part No.	DESCRIPTION
1	4455618	Door Liner
2	4449259	Glass, Inner
3		Hinge, Door
	9760565	R.Side (Brown)
	9760566	L.Side (Brown)
4	4457132	Retainer, Glass
5	4450813	Bracket, Handle
6	8300820	Seal, Top
7	4449809	Screw
8	8300903	Assy, Door Glass
9	4448854	Handle, Door
10	4450863	Retainer, Glass
11	4449743	Screw

INTERNAL OVEN PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

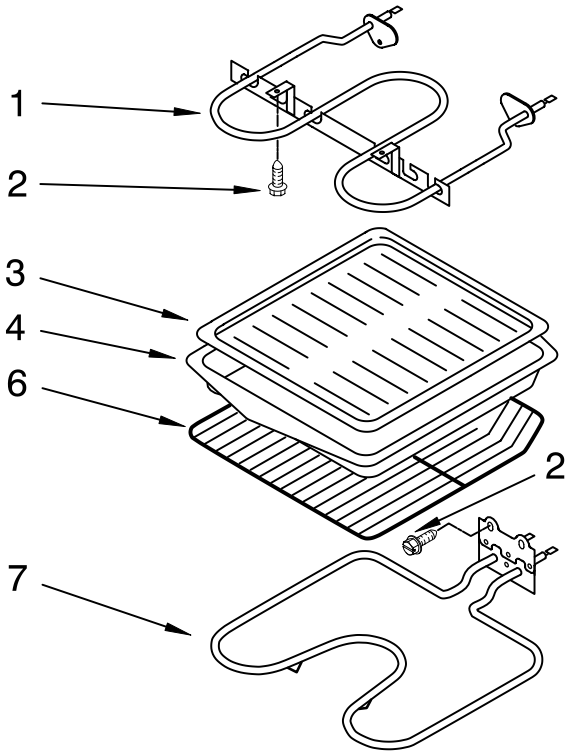

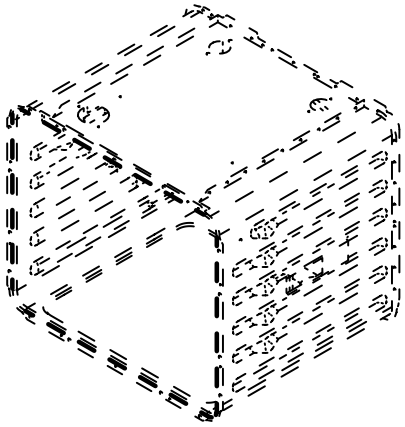

Illus. No.	Part No.	DESCRIPTION
1	4456103	Element, Broil
2	4449154	Screw
3	4457277	Grill, Broiler
4	4457276	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake

TOP VENTING PARTS

For Models:RS610PXGW11,RS610PXGV11

(White) (Black on Biscuit)

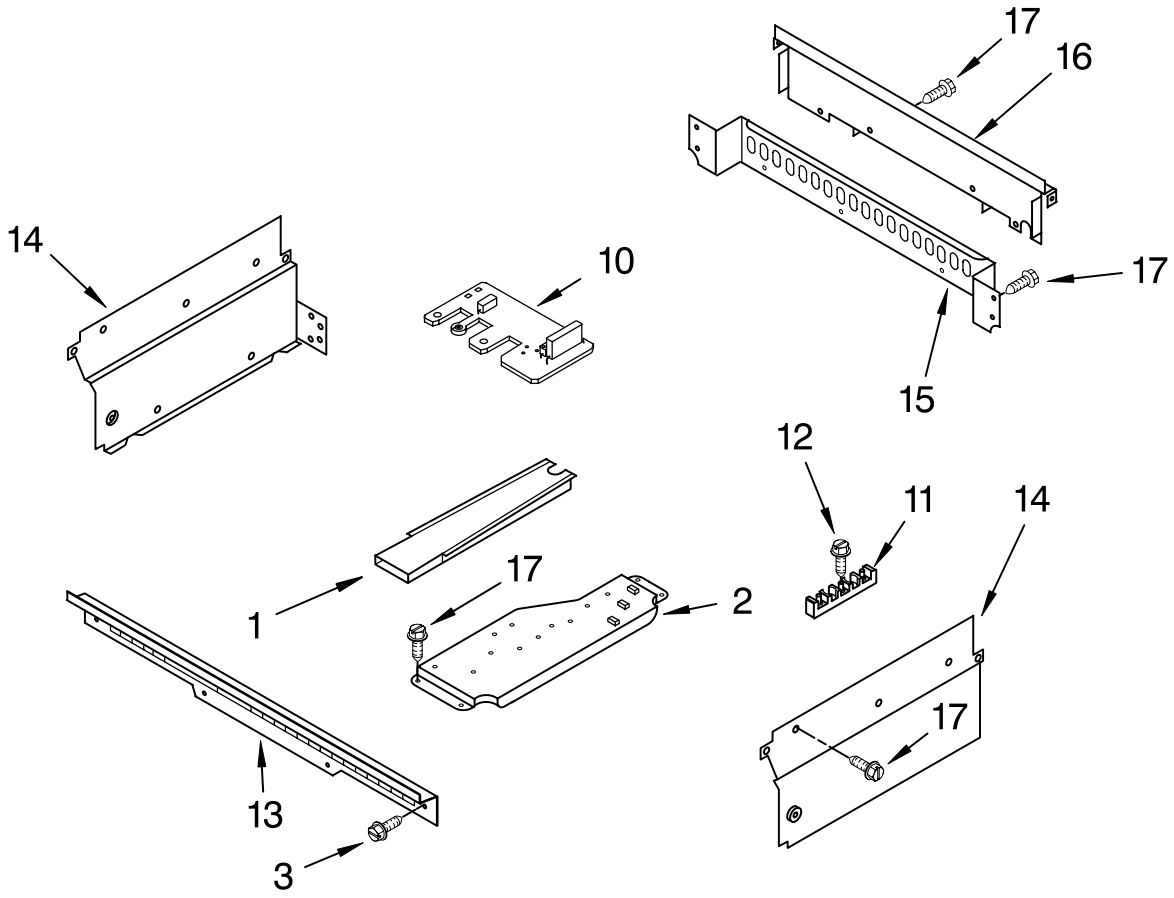

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4454943	Plate, Mounting
3	4450038	Screw
10	4451985	Suppressor
11	4449868	Block, Terminal
12	3400080	Screw
13	4448549	Vent, (Control Panel)
14		Side, Control Compt.
	3191832	Right
	3191833	Left
15	4452244	Back, Control
16	3191842	Cover, Rear
17	4449809	Screw

OPTIONAL PARTS

For Models:RS610PXGW11,RS610PXGV11
(White) (Black on Biscuit)

Illus. No.	Part No.	DESCRIPTION
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
		WIRING HARNESS PARTS
	3191220	Harness, Wire (Main)
	4455805	Grommet
	8301875	Harness, Wire (EDC)
	FE02313	Bushing
	4451163	Conduit
	3400015	Screw, Ground
	4448664	Clamp
	3192236	Harness, Wire (Infinite Switch)
	4455592	Harness, Wire (Light)
	4454384	Ground, Wire
	4452222	Spacer, Harness
	4454835	Tie, Cable
		Miscellaneous
	4448950	Screw, Install. 8−14 x 1" (4)
	814381	Hinge Pin Kit